





# Installation instructions

iRoom's iDock frame for flush mount

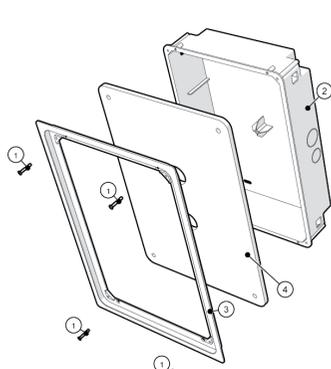

Description	ID	Description	ID
cardboard frame	4	Backbox	2
aluminum frame	3	Screws	1

iRoom's iDock frame for flush mount - **portrait**

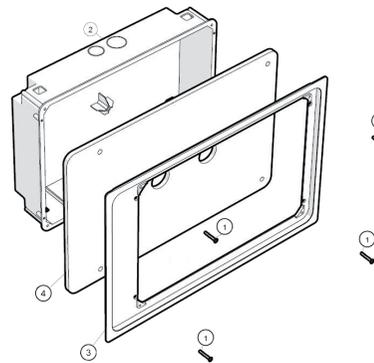

Description	ID	Description	ID
cardboard frame	4	Backbox	2
aluminum frame	3	Screws	1

iRoom's iDock frame for flush mount - **landscape**


## Scope of delivery

aluminum frame for flush mount (1x), cardboard for masonry installation (1x), mounting screw (4x)




# Installationsanleitung

iRoom's iDock Rahmen flächenbündig

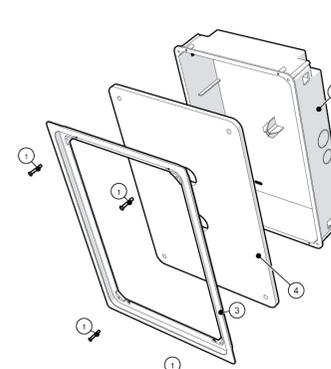

Description	ID	Description	ID
cardboard frame	4	Backbox	2
aluminum frame	3	Screws	1

iRoom's iDock Rahmen flächenbündig - **Portrait**

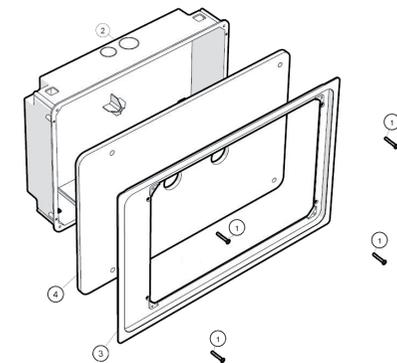

Description	ID	Description	ID
cardboard frame	4	Backbox	2
aluminum frame	3	Screws	1

iRoom's iDock Rahmen flächenbündig - **landscape**

## Lieferumfang

Aluminiumrahmen zur flächenbündigen Montage(1x), Karton-Putzdeckel (1x), Montageschrauben (4x)

## Mounting in Masonry

!	if you execute flush mount installation the recess dimensions of backbox installation instructions are obsolete!
!	<b>center of backbox is NOT center of iDock landscape please refer to backbox installation instructions!</b>

1.	Prepare a recess in the wall <b>Landscape or Portrait:</b> 215,0/305,0/75,0 mm - 8.46"/12.00"/ 2.95"
2.	Remove the break-out for the cable exits on the backbox.
3.	Feed in the power leads through the hole in the back box. Use a suitable cable grip sleeve
4.	Place and fix the backbox in the recess. Do not deform the backbox. The top surface of the backbox need to be 8,5 mm - 0,35" below the surface of the finished wall.
5.	Attach the cardboard frame to the backbox and bolt them together using the screws included (3x20mm)
6.	Plaster in the backbox and ensure a straight, flush wall and distortion-free installation of the back box. Otherwise it may cause mechanical problems.
7.	After finishing plasterwork cut out the cardboard frame and remove it.
8.	Attach the aluminum frame to the backbox and bolt them together using the screws included (3x20mm)
9.	for installation of your iRoom's iDock please follow the „Installation manual iRoom's iDock“

## Mounting in dry walls

!	if you execute flush mount installation the recess dimensions of backbox installation instructions are obsolete!
!	<b>center of backbox is NOT center of iDock landscape please refer to backbox installation instructions!</b>
!	minimum thickness of dry wall covering: 20 mm / 0,75"

1.	Attach the aluminum frame to the backbox and bolt them together using the screws included (3x20mm)
2.	Prepare a recess in the wall <b>Landscape:</b> 231,0/357,0/78,0 mm - 9.10"/14.02"/ 3.07" <b>Portrait:</b> 231,0/321,0/78,0 mm - 9.10"/12.65"/ 3.07"
3.	Remove the break-out for the cable exits on the backbox.
4.	Feed in the power leads through the hole in the back box. Use a suitable cable grip sleeve
5.	Cut some small thread gaps in the safety strips that cover the recess spaces for the mounting clips. Do not remove the safety strips!
6.	Place the backbox in the recess. Do not deform the backbox.
7.	Feed the mounting clips into the recesses and screw them tight.
8.	Ensure a straight, flush and distortion-free installation. Otherwise it may cause mechanical problems.
9.	for installation of your iRoom's iDock please follow the „Installation manual iRoom's iDock“

## Unterputzmontage

!	wenn sie sich für eine flächenbündige Montage entscheiden, sind die in der Montageanleitung angegebenen Ausschnittmaße obsolete!
!	<b>das Zentrum der Unterputzdose Landscape ist NICHT das Zentrum der iRoom's iDock Landscape. Beachten sie bitte die Hinweise der Installationsanleitung der Unterputzdose</b>

1.	Bereiten sie eine Ausnehmung in der Wand vor <b>Landscape oder Portrait:</b> 215,0/305,0/75,0 mm - 8.46"/12.00"/ 2.95"
2.	Entfernen sie den Ausbruch der Kabeldurchführung.
3.	Führen Sie das Versorgungskabel von der Seite durch den Auslass der UP-Dose. Verwenden Sie einen passenden Würgeknippel.
4.	Plazieren und fixieren sie die Unterputzdose in der Maueröffnung. Vermeiden sie Verformung. Die Oberfläche der Unterputzdose muss 8,5 mm tiefer als Oberfläche der fertigen Wand sein.
5.	Montieren sie den Karton-Putzdeckel mit den mitgelieferten Schrauben (3x20mm)
6.	Putzen sie die UP-Dose ordnungsgemäß ein und achten sie auf eine gerade und ebene Installation.
7.	Entfernen sie nach den Verputzarbeiten den Karton-putzdeckel.
8.	Montieren sie den Aluminiumrahmen mit den mitgelieferten Schrauben (3x20mm)
9.	Fahren mit dem Einbau der iRoom's iDock fort. Folgen sie bitte den Anweisung der Installationsbeschreibung

## Hohlwandmontage

!	wenn sie sich für eine flächenbündige Montage entscheiden, sind die in der Montageanleitung angegebenen Ausschnittmaße obsolete!
!	<b>das Zentrum der Unterputzdose Landscape ist NICHT das Zentrum der iRoom's iDock Landscape. Beachten sie bitte die Hinweise der Installationsanleitung der Unterputzdose</b>
!	Mindeststärke der Trockenwandbeplankung: 20 mm / 0,75"

1.	Montieren sie den Aluminiumrahmen mit den mitgelieferten Schrauben (3x20mm)
2.	Bereiten sie eine Ausnehmung in der Wand vor <b>Landscape:</b> 231,0/357,0/78,0 mm - 9.10"/14.02"/ 3.07" <b>Portrait:</b> 231,0/321,0/78,0 mm - 9.10"/12.65"/ 3.07"
3.	Entfernen sie den Ausbruch der Kabeldurchführung
4.	Führen Sie das Versorgungskabel von der Seite durch den Auslass der UP-Dose. Verwenden Sie einen passenden Würgeknippel.
5.	Schneiden Sie Durchführungen in die Sicherheitsstreifen, die die Ausnehmungen für die Montageklammern abdecken. Entfernen Sie die Sicherheitsstreifen nicht!
6.	Setzen Sie die UP-Dose in die Ausnehmung ein.
7.	Fixieren Sie die UP-Dose mit den Montageklammern bündig zur Wand.
8.	Vermeiden Sie Verformungen der UP-Dose.
9.	Fahren mit dem Einbau der iRoom's iDock fort. Folgen sie bitte den Anweisung der Installationsbeschreibung