Quick Installation Guide **trivum M2**



Item No.	**201027**
EAN	**4260393851078**
HS Code	**85 198 100**
Product URL	https://www.trivum.com/en/m2
Release Date	October 2026
Amplifier	• 4x 125 W RMS into 4 ohms • Class-D amplifier (digital) • Minimum speaker impedance: 4 ohms
Power Supply	• 100-240 V AC (max. 600 W) • Idle power consumption (no active zone): approx. 5 W
Housing	• Black powder-coated sheet steel • Device: 216 x 71 x 232 mm (W x H x D) • Packaged: 322 x 77 x 293 mm (W x H x D) • Net weight: 2.55 kg
Connections	• 1x Network (RJ45) • 1x USB (service) • 2x Stereo speaker outputs (2x 2-pin terminal) • 1x Analog/digital stereo output (combo jack TOSLINK/3.5 mm) • 1x Analog/digital stereo input (combo jack TOSLINK/3.5 mm) • 1x Wi-Fi/Bluetooth antenna (SMA • 2x USB-C trivum Matrix input (SDAT/MDAT) • 2x USB-C trivum Matrix output (MDAT) • 1x Power (IEC 60320 C6)
Network	• LAN (RJ45 Ethernet) • Wi-Fi
Package Contents	• 1x M2 • 1x Wi-Fi antenna • 1x Power cord • 2x Pluggable speaker terminal blocks • 2x TOSLINK to combo jack adapters • 1x Quick Installation Guide

Specifications are subject to change without notice.

© trivum technologies GmbH - 2026
Eierstr. 48 - 70199 Stuttgart
www.trivum.com

Quick Installation Guide **trivum M2**

1. Connection

Connect cables to Line-In, Line-Out or audio speakers, ethernet network and power supply. Please refer to the connection diagram if you have any questions.

2. Configuration

The trivum M2 is configured via web browser.

To find the device in your network, use the trivum App or the trivum ServerAdmin tool. Both automatically scan the local network and list all trivum devices with their IP addresses.

To open the configuration interface, enter the IP address of the M2 followed by `/setup` in your browser:

`http://<IP address>/setup`

Example: `http://192.168.1.50/setup`

2.1.Using trivum App (iOS or Android)

- Please scan QR Code to download the trivum iOS App or Android App.
- You can also visit -> https://www.trivum.com/en/Support/Downloads/

- Start the App and tap on the button "*Select trivum system*"
- Then all trivum devices in your network, their IP addresses and serial numbers will be listed.
- Please follow the instructions in the app.

2.2. Using trivum ServerAdminTool (Windows)

- Please download and install the ServerAdmin Tool
- Start the ServerAdmin Tool.
- Double-click on the device (M2) to open the MusicCenter WebConfig (main config site).
- ☆ Note: If you are not sure about the assignment of the listed devices, you can compare the serial number in the list with the serial number on your device.
- If you need static IP instead of DHCP: click "Network".
    - Select "Use static IP address".
    - Enter your IP settings and Restart to apply changes.

3. Adding a network share

The trivum M2 can play audio files which are stored on network shares. If you want to use a shared directory, make sure that it supports the media sharing service Samba service (smb). To add a network share (e.g. NAS):

- Open the Music Center WebConfig.
- Click: "Music on NAS -> Setup music library -> Add network share".
- Set the network path and user/password if required.
- Click "Save as new share".
- Click "Refresh your music index now".

© trivum technologies GmbH - 2026
Eierstr. 48 - 70199 Stuttgart
www.trivum.com

4. Adding your Online streaming service account

- ➡ Open the Music Center WebConfig.
- ➡ Click "Streaming".
- ➡ Click "Add Service".
- ➡ Select your favorite service and enter your user account.
- ➡ Click Create the streaming service given account.

☆ Note: trivum supports only paid accounts.
☆ Tip: The M2 is AirPlay ready, so it's easy to stream every kind of music to the specific zone (with Apple devices).

5. Backup your configuration

Once you have completed the setup, we recommend you to make a backup of your configuration:

- ➡ Open the Music Center WebConfig.
- ➡ Click "Backup/Restore -> Export/import configuration".
- ➡ Follow the instructions.

For easy operation of your M2, we recommend our trivum TouchPad.

6. How to use a trivum TouchPad?

- ➡ Make sure your TouchPad is running software v2.35 or later.
- ➡ Wait a few seconds until the TouchPad has booted.
- ➡ On the starting screen press "Pair TouchPad with Audio System".
- ➡ Press "Select..." and select your preferred trivum MusicCenter from the pop-up menu.

7. How to use KNX?

The KNX programming of M2 is done via the web browser. No need for extra KNX software.

- ➡ Open the Music Center WebConfig.
- ➡ Click "KNX->Setup KNX communication" and enable "use KNX / IP".
- ➡ Follow the instructions.
- ☆ You find further informations for KNX on https://www.trivum.com/trivum/docs/en/mcenter-knx.html


8. Further documentation and troubleshooting

To find helpful log files in support cases:

- ➡ Open the MusicCenter WebConfig.
- ➡ Click "Logs & Warnings".

© trivum technologies GmbH - 2026
Eierstr. 48 - 70199 Stuttgart
www.trivum.com

9. Connection diagram

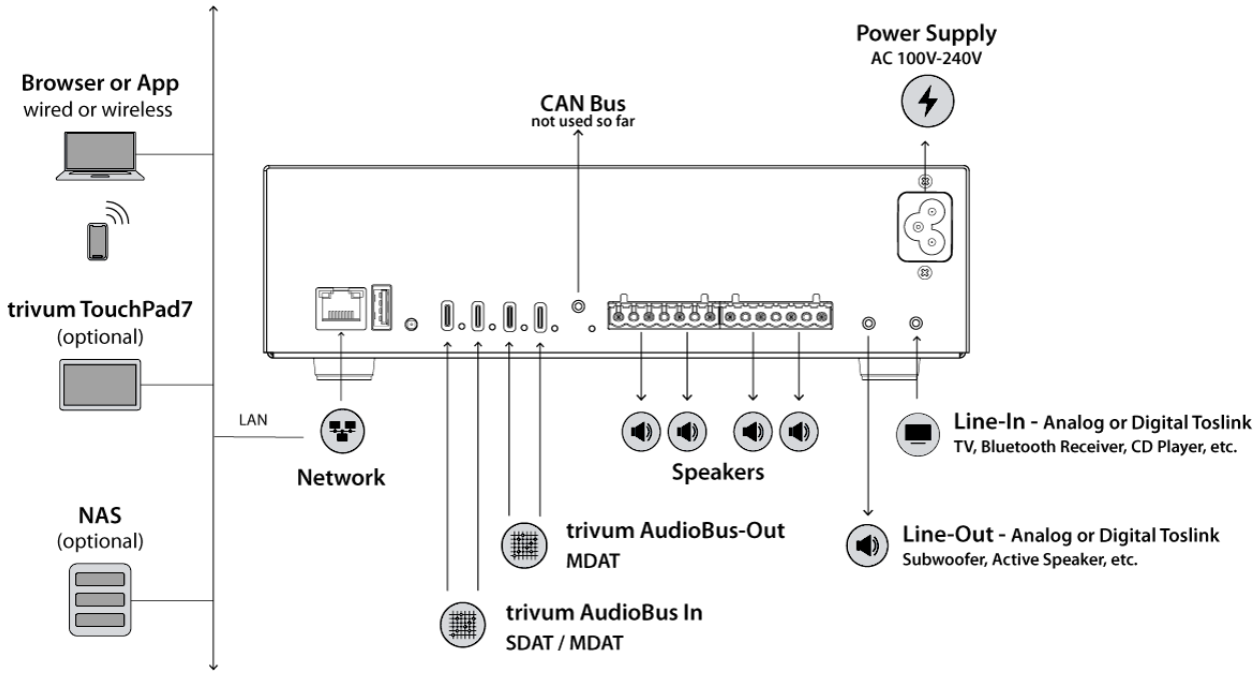

10.Required components for installation

- Ethernet cable
- Network with DHCP capable router
- Browser (PC / Mac) or trivum App
- For line/digital input: 3.5mm connector or Toslink cable and adapter
- For line/digital output: 3.5mm connector or Toslink cable and Mini-Toslink adapter
- Speakers with 4 or more Ohms impedance
- For matrix connections: USB-C cable (USB-C 3.0 cable with 5 Gbit/s and 15 W can also be used for hard disks etc.)

Please visit also our website for the latest documentation and information
https://www.trivum.com

If support is needed, please contact your local trivum dealer or write to
service@trivum.com

© trivum technologies GmbH - 2026
Eierstr. 48 - 70199 Stuttgart
www.trivum.com